

# HAPPY HOUR 07:15 - 11:15

440x440 - 500x380

Lavabi ad incasso. Installazione sotto il piano del mobile. Senza troppopieno.

Countertop washbasin. To be installed under the vanity units. Without overflow.

Einbauwashtisch. Montage unterm Möbelstück. Ohne Überlauf.

Vasques à encastrer sous plan de toilette. Sans trop-plein.

Lavabos de encastre. Para instalar bajo encimera del mueble. Sin rebosadero.

Встроенный умывальник. Установка под мебельную столешницу; без перелива.



 **YXSP**





 **YXSQ**

## INSTALLAZIONE INSTALLATION

**incasso sottopiano**  
built under



**esempi di montaggio**  
mounting examples

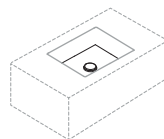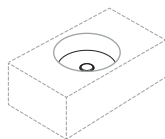

## ACCESSORI ACCESSORIES



**YXST**  
fissaggio sottopiano  
undercounter special fixing




**YXMY**  
sifone di scarico  
drain trap





**YXMN (BI-White)**  
**YXMP (CR-Chrome)**  
piletta a scarico libero  
free outlet drain siphon

## DISEGNO TECNICO TECHNICAL DESIGN

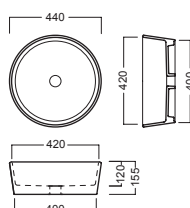

Apertura per installazione su piano  
Hole for surface installation

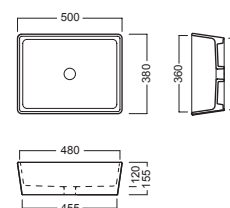

Apertura per installazione su piano  
Hole for surface installation

