BETTE RECTANGULAR 1700 SHOWER TRAY

Product Image

Technical Specification

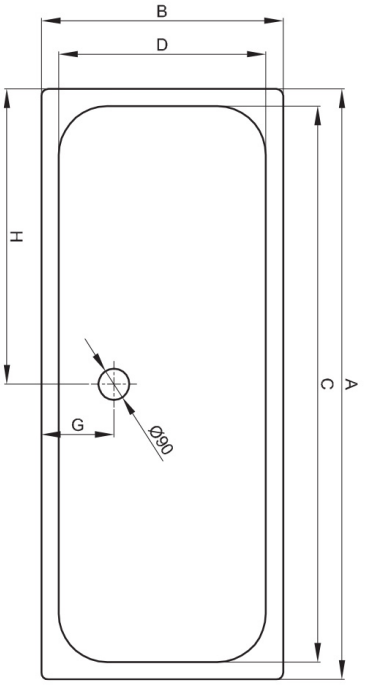

dimension	A	B	C	D	G	H	article no.	drain
170 x 90 x 3,5 cm	1700	900	1600	800	210	850	5998	Ø 90

Description

Bette Rectangular 1700 Shower Tray

B5998B

Additional Information

Available options:
9WA003C 80 to 50mm Waste Set

- Includes Tiling Lip
- Waste Not Included

Important Installation Note:
Clearance required under shower tray to fit Bette or other shower waste will vary depending on installation – please see detailed installation instructions at www.argentaust.com.au or call the Argent Tech Hotline on 1800 356 717

BETTE 30 Year Warranty Made in Germany

SHOWER TRAY / BATH INSTALLATION INSTRUCTIONS

FOR INFORMATION ONLY NOT TO SCALE

FLASHING STRIP TO LENGTH
WITH ADHESIVE STRIP

FLASHING STRIP
PROFILE

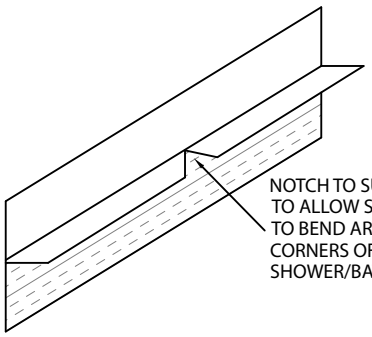

BATH / SHOWER TRAY

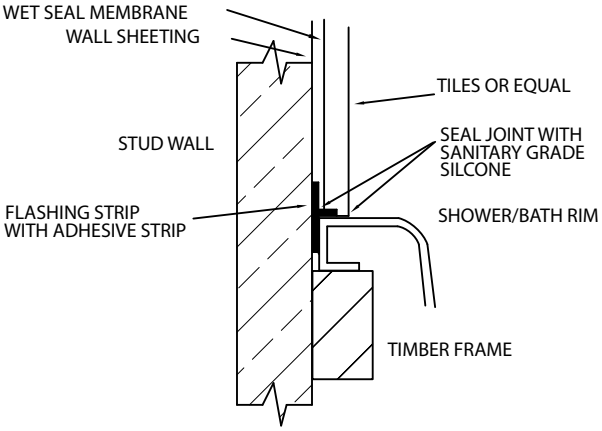

1. CUT FLASHING STRIP AND FOLD AROUND THE CORNERS OF THE BATH/ SHOWER TRAY
2. SEAL BETWEEN FLASHING STRIP AND BATH/SHOWER TRAY WITH A SANITARY SILICONE SEALANT
3. SEAL BETWEEN FLASHING STRIP AND WALL SHEETING WITH A SANITARY SILICONE SEALANT
4. SEAL BETWEEN WALL SHEET AND TILES WITH WATER PROOF MEMBRANE
5. SEAL JOINT BETWEEN WALL FINISH EG TILES AND TOP OF BATH/SHOWER WITH A SANITARY SILCONE SEALANT
6. RECOMMENDED SANTARY SILICONE SEALANT DOW CORNING OR EQUAL

BATH

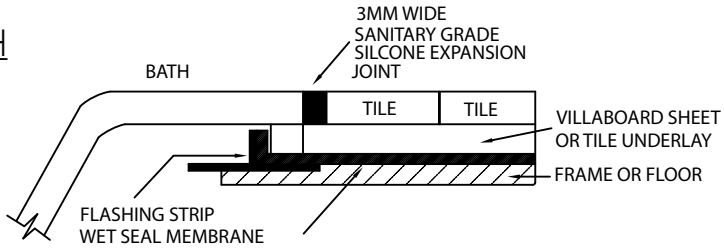

1. PROVIDE FLASHING STRIP
2. NOTCH TILIING STRIP AND FOLD TO SUIT CORNERS OF THE BATH
3. PROVIDE SUITABLE WET SEAL MEMBRANE BETWEEN THE FLOOR AND FLOOR FINISH
4. PROVIDE VILLABOARD OR EQUAL TO ACCEPT TILE FINISH
5. SEAL AROUND THE BATH AND VILLABOARD WITH SANITARY GRADE SILICONE
6. SEAL AROUND THE BATH AND TILES WITH SANITARY GRADE SILICONE

ISLAND OR FLUSH MOUNTING FOR BATH

SHOWER TRAY

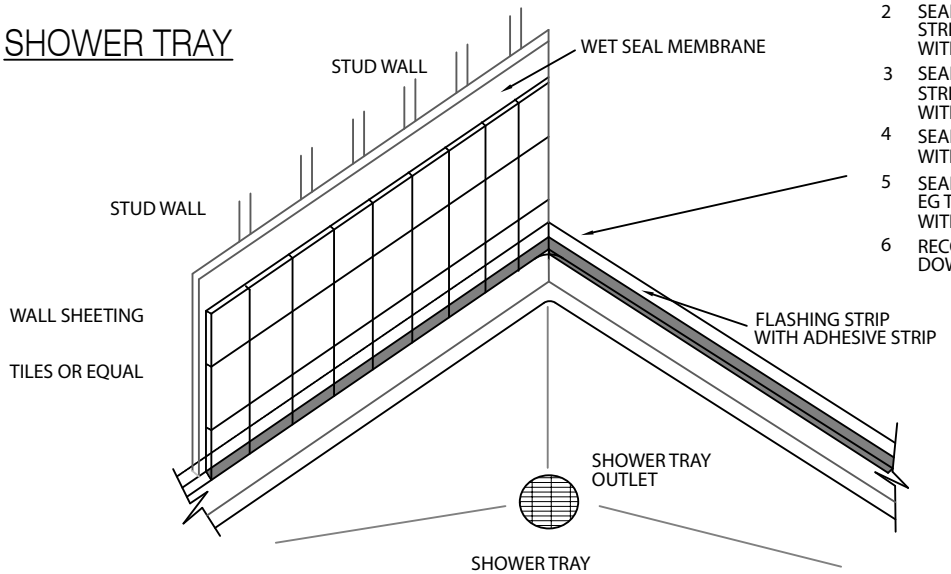

1. CUT FLASHING STRIP AND FOLD AROUND THE CORNERS OF THE BATH/ SHOWER TRAY
2. SEAL BETWEEN FLASHING STRIP AND BATH/SHOWER TRAY WITH A SANITARY SILICONE SEALANT
3. SEAL BETWEEN FLASHING STRIP AND WALL SHEETING WITH A SANITARY SILICONE SEALANT
4. SEAL BETWEEN WALL SHEET AND TILES WITH WATER PROOF MEMBRANE
5. SEAL JOINT BETWEEN WALL FINISH EG TILES AND TOP OF BATH/SHOWER WITH A SANITARY SILCONE SEALANT
6. RECOMMENDED SANITARY SILICONE SEALANT DOW CORNING OR EQUAL

WATER PROOFING TO COMPLY
WITH BCA/BSA &/OR LOCAL AUTHORITY REQUIREMENTS

Argent

Villeroy & Boch
1748

BETTE
Baden und Duschen

SHOWER TRAY WASTE INSTALLATION OPTIONS

FOR INFORMATION ONLY NOT TO SCALE

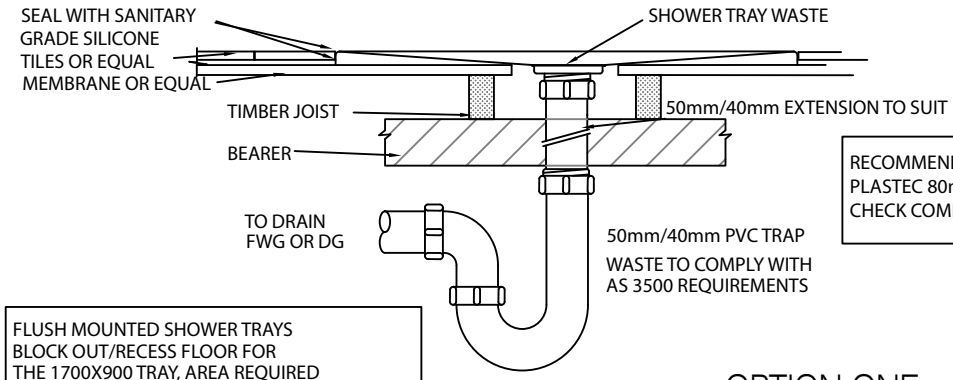

RECOMMENDED SHOWER TRAY WASTE
PLASTEC 80mm X 50mm ID# 11793 OR EQUAL
CHECK COMPLIANCE WITH LOCAL AUTHORITIES

FLUSH MOUNTED SHOWER TRAYS
BLOCK OUT/RECESS FLOOR FOR
THE 1700X900 TRAY, AREA REQUIRED
800x800x40MM IN DEPTH

OPTION ONE

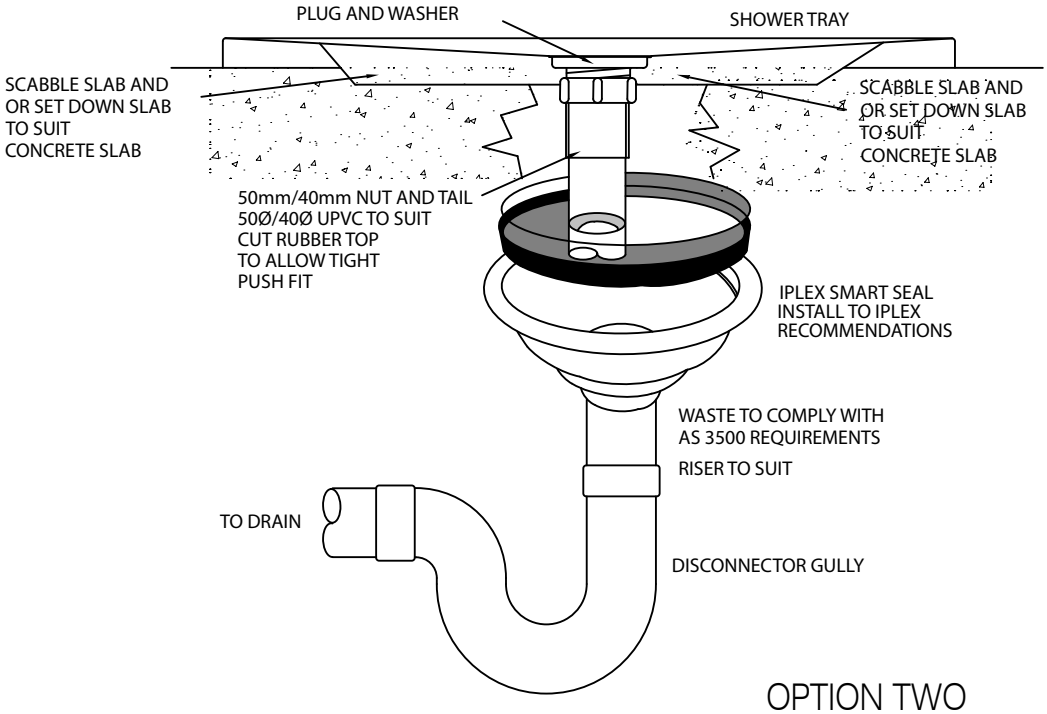

OPTION TWO

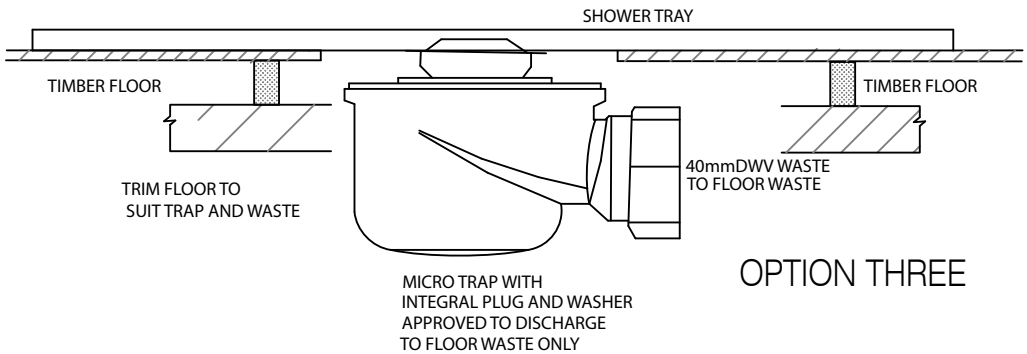

OPTION THREE

Argent

Villeroy & Boch
1748

BETTE
Baden und Duschen

Argent

BETTE

994632 Bette Bath/ Shower Tray Tiling Lip
1900mm x 2 included

Tiling Lip
Installation Instructions

Australian Standard 2023/1995 Section 1.5.4 specifies, “A built-in bath shall be provided with a tiling flange or bead not less than 10mm in height.”

Australia Standard AS 3470-1989 Section 3.6 Preformed shower bases, states, “Preformed shower bases shall be supported to prevent distortion or cracking, and shall be sufficiently recessed into the wall to allow water-resistant materials to pass down inside the perimeter rebate over the upstands of the shower base.”

This high impact rigid PVC modified grade material will allow for the bath/shower tray to be flashed along the full length and ends to confirm to the standard.

This material should be cut to the required lengths plus 50mm, and mitered at the corners allowing a 50mm overlap that must be folded and secured to the adjoining piece to form a continuous element. The edge of the bath/shower tray and also the area where the flashing material and the rim of the bath/shower tray meet should be filled with a mould resistant silicone bathroom sealant.
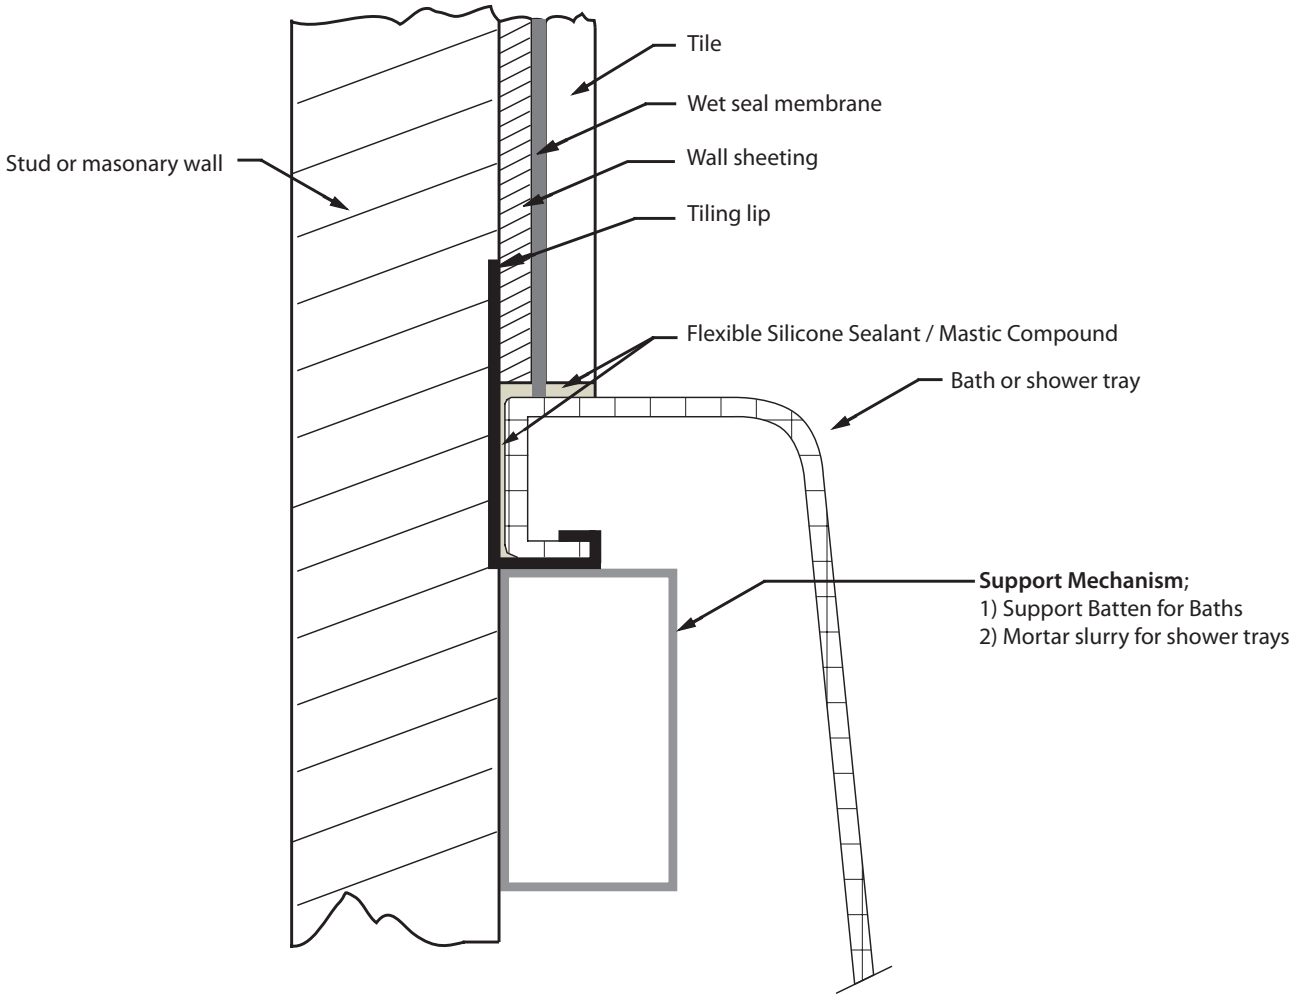
Approved wet seal membrane should be applied in-between the wall sheeting and the tiles.